

Soft Absorber

FA-1410RB/FA-1410RD/FWM-1410RBD Series

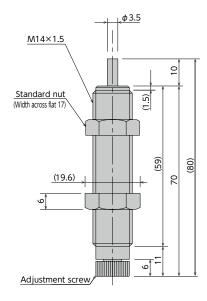

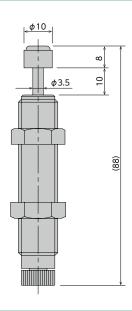



Specifications

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Range of impact rate m/s	Orifice type
FA-1410RB-S	10	3.92(0.4)	30(30)	0.3~1	Single-orifice type
FA-1410RB-C					
FA-1410RD-S		5.88(0.6)	4.5 (4.5)	0.7~3	Multiple-orifice type
FA-1410RD-C					
FWM-1410RBD-S			35 (35)	0.3~2	Multiple-varying orifice type
FWM-1410RBD-C					

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

Common Specifications

Max. drag	N (kgf)	1,813(185)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	68
Max. absorption energy per minute	J/min(kgf·m/min)	147 (15)	: C type	g	73
Recovering power of the piston r	od N(kgf)	9.8(1.0) or lower			

Selection Guideline The FA-1410 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-1410RB series	FA-1410RD series	FWM-1410RBD series
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorbance Properties	Resistance	Resistance	Resistance

Precautions for Use

- * Do not use this product without carefully reading the attached owner's manual.
- * Ensure that an external stopper (Stopper nut OP-020RB) is also used.
- * Do not turn the oil inlet screw located at the bottom of the main unit.
- * Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- * Do not use this product in a vacuum or a location where it may come in contact with oil.
- * Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within $\pm 2.5^{\circ}$)

Adjustment Method

- * To adjust, turn the adjustment knob located at the bottom of the main unit.
- * Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- * Once the adjustment is complete, secure with a lock screw using a hex wrench.

RoHS Compliant


Products specification might be changed without notice.

Optional Parts

Eccentric angle adaptor OP-010RB

Model OP-010RB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is $\pm 10^{\circ}$.
- The caps and the guides for inclined use are not unbundled.

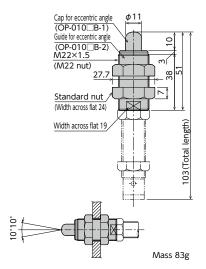


Note) Material of cap for eccentric angle: POM

Square flange OP-040RB

Model OP-040RB

 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

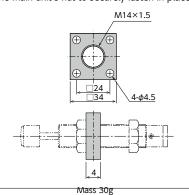


Standard nuts are sold separately as well.

Applicable Models	Model
FA-1410RB	
FA-1410RD	M14 nut
FWM-1410RBD	

Stopper nut OP-020RB- □

ŀ	
l	Model
	OP-020RB-S
	OP-020RB-C
	OP-020RB-C

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

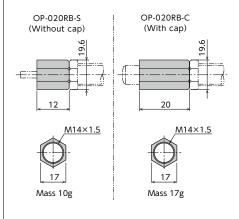


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


Liquid-proof cap F□□-1410R □□-C-060


Model
FA-1410RB-C-060
FA-1410RD-C-060
FWM-1410RBD-C-060


- Ideal for use in environments where oil splatter poses a problem.
- •Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- ●F□□-1410M□□-C-060
 - · Model indication A or WM is inserted in \square of F $\square\square$.
- · Model indication B, D or BD is inserted in \square of M \square \square .

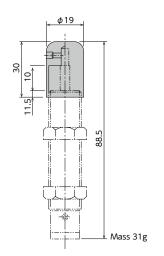

Holder with a switch OP-030RB-2 (With a stopper function)

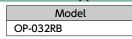

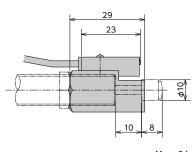

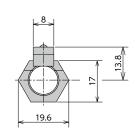

Mass 34g

- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.